

## MIRROFLEX PATTERNS


Panel Size: 18" x 24"



Traditional 1



Traditional 4

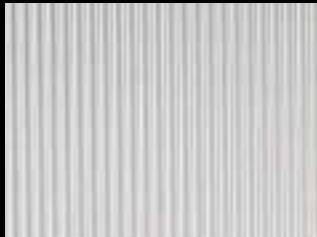

Rib 1



Miniquad

## MIRROFLEX COLOR RANGE



White  
Paintgrade



Argent  
Silver



Argent  
Copper

## MIRROFLEX ACCESSORIES



When panels end on a flat wall and are cut, a finished edge can be achieved by sliding on a matching trim strip (*see instructions inside*).



### WHAT ARE MIRROFLEX STRUCTURES BACKSPLASH PANELS?

**1.** They are ultra-light, decorated thermoplastic panels that are chemical, stain and impact resistant, **2.** Fire retardant (however they are not to be exposed to heat environments over 140°F as they could deform), **3.** Aggressive Peel N' Stick backing, **4.** All panels have a unique overlap feature that makes seams invisible, **5.** Available with Color matching Universal Trim Strips are available to finish cut edges, **6.** Suitable for wet environments.

## MIRROFLEX OPTIONAL FINISHES

Mirroflex Structures can also be supplied in Mirror, Brushed Stainless (not shown), and Patina finished to further enhance its backsplash appeal (usually in Traditional 1 style only).

These finishes have a protective film on the face that needs to be removed prior to installation.

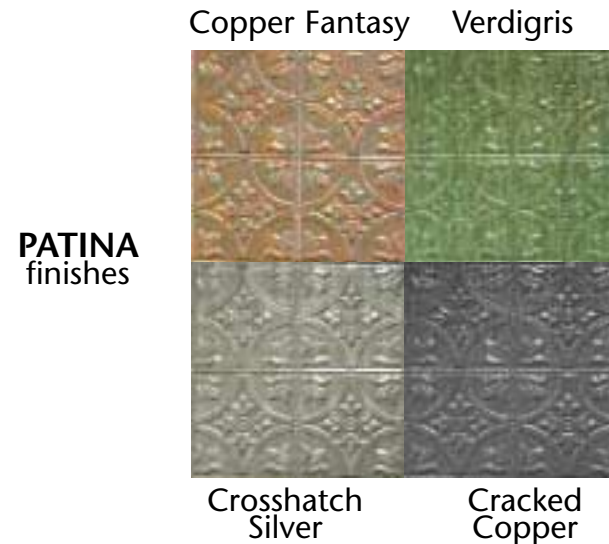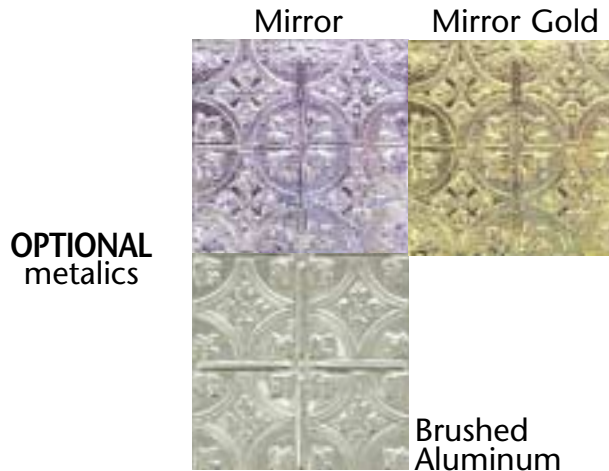

More finishes, patterns, two-tone effects, and larger sheet sizes are available upon special order; visit [www.advtechnology.com](http://www.advtechnology.com) and click on "Mirroflex for Ceilings and Walls" to see the complete collection.



Crafted with pride in the USA  
©2004, Advanced Technologies Inc. All rights reserved.

# MIRROFLEX™ STRUCTURES BACKSPLASH PANELS



DO IT YOURSELF!

**1**  
Cut to Size



**2**  
Peel Backing



**3**  
Stick in Place



Thermoplastic Panels with a PEEL N' STICK backing and a unique overlap feature making seams invisible

## PANEL INSTALLATION INSTRUCTIONS

1. Before starting, clean all surfaces that are to be used with alcohol (*the surface must be dry, smooth, and free from dust, grease, wax, etc.*).
2. Prior to fabrication, it is important to understand the overlap feature of each panel: Each panel has two 1/2" flat edges (*the longer flat edge is the top of the panel and shorter flat edge is the right side of the panel*). Arrange ALL panels this way so additional panels can be added to the top or right side of any panel.
3. Start from the left side bottom and work either upwards or to the right.
4. Cut **Mirroflex Structures** panels to size using a good pair of scissors or a utility knife. (*If using a utility knife, score 2-3 times. Then break with downward pressure – panel pieces will be hinged by the adhesive. Then cut the adhesive layer to complete the cutting.*)
5. Cut all pieces to size and check to make sure they all fit perfectly in place and overlap properly. *When overlapping, leave a 1/16" space for expansion.*
6. Once it has been determined that all cut pieces fit properly, start at the far left, and expose the adhesive layer by peeling off the backing. Exercise EXTREME care in positioning this first piece, making sure that it is positioned exactly where intended. ONCE IT HAS BEEN APPLIED, IT CANNOT BE EASILY REMOVED




- AND/OR REPOSITIONED! If your panels have protective film on the decorative side, it must be removed NOW – prior to adding additional panels – so the adhesive layer will bond properly at the overlaps.
7. Starting at the left edge, apply pressure with a rag to seal the left edge to the wall (*keep all but the left edge from contacting the wall*) and continue to apply pressure from top to bottom – moving from left to right – to squeeze out trapped air and insure the bond between the panel and the wall is secure (*see photo above*).
  8. Add additional panels in the same fashion.
  9. If the area to be covered ends on a flat wall, and you desire to finish the cut edge of the last panel, you can do so by adding **Mirroflex Universal Trim Strips** in the same color as your panels. These strips slide into the cut panel see image on right).

## TRIM STRIP INSTRUCTIONS



**MIRROFLEX Universal Trim Strips** will join panel to panel or act as end caps. Available in all MIRROFLEX colors.

- 1 Cut to size
- 2 Slide Universal Trim Strip over cut edge as shown (*do not remove wax paper backing*).
- 3 When ready to install this panel, remove wax paper backing and install according to instructions at left.

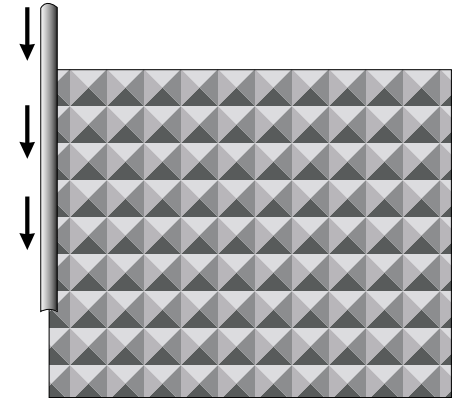

**CARE AND CLEANING:** Clean only with warm soapy water. Never use abrasive cleaners. Using a high quality auto polish can help protect the finish.

**CAUTION:** Even though Mirroflex Panels are fire retardant, they can be deformed with excessive heat. Never expose to heat over 140°F. Make sure toaster ovens, cooking ranges, etc. are 2-3 inches away from the panel's surface.